

# **PRODUCT INFORMATION & INSTALLATION GUIDE 2023**

Airius Model G400/EC SAPPHIRE SERIES



www.airius.co.uk



#### G400/EC-230V

# **Product Information & Installation Guide** SAPPHIRE SERIES - Model G400/EC



hanging units can be angled up to 90° off vertical cal attachment point provided near discharge.

# Heating

Up to 23 m (75 ft) Up to 15 m (49 ft) Up to 22 m (72 ft) Up to 14 m (45 ft) Up to 232 m<sup>2</sup> (2500 ft<sup>2</sup>) Up to 140 m<sup>2</sup> (1506 ft<sup>2</sup>)

tive only and can change subject to application. For more please contact Airius.

Cooling

# MOTOR

Single Phase Electrically commutated, variable speed 92% efficient motor German EBM Papst EC motor 230 Volt @ 50/60 Hz

### **OPERATING TEMPERATURES**

Operating Temperature

= -25°C (-13°F) - 60°C (140°F)

# HOUSING

PC/ABS Resin - Inc. internal fixed blade stator, nozzle and cowl

5VA flame resistance rating

Applicable to Titan Series Upgrade - Chemical resistant ABS resin housing and stator blades with stainless steel fixings

# **INGRESS PROTECTION**

IP54 Rated

# **UNIT SIZE**

Weight: Height to Rim: Total Height: Diameter:

## MOTOR

Watts\*: RPM\*: L/S\*: m<sup>3</sup>/hr: Centre Line Velocity<sup>1</sup>: AMPS\*:

330 mm (13.0 in) 495 mm (19.5 in) 230V @ 50 Hz

**STANDARD** 

N/A

12.4 kgs (28 lbs)

400 1546 1105 (2343 CFM) 3980 1.15 m/s @ 18 m 2.60

\*Motor data provided by motor manufacturer and is subject to change at anytime <sup>1</sup>Velocity profile tested in situ

## **NOISE LEVELS**

Sound Pressure Level

= 45.9 dB(A)

Calculated from nozzle of unit to head height when installed at maximum ceiling height

For additional noise level information contact Airius

## COLOUR

Cool gray 2C - Off white as standard

Can be tailor painted to your colour specifications

Titan Series Upgrade - Black as standard

## **ACCESSORIES & OPTIONS**

On/off speed controls allow for variable output from Airius unit.

EC controls available

Fully BMS controllable

Bacnet Protocol for individual fan control


For horizontal installations Airius recommend the use of a cradle. a second cable or a rod attachment to support the fan nozzle

#### WARRANTY

5 years parts and workmanship from shipping date 120 day money back guarantee (T's & C's apply)



# **VELOCITY PROFILE**

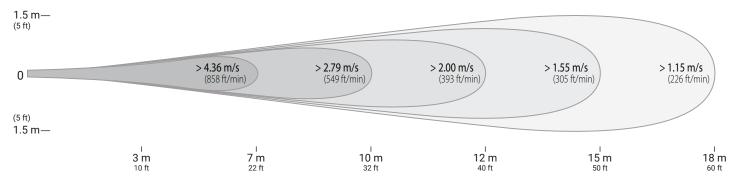

# **UNIT PLACEMENT**

# PREPARATION

Install electrical circuit(s) and outlet(s) in accordance with national and local electric codes.

Outlets should generally be mounted vertically unless a "twist/locking" type is being used.

Wall switch may be installed in circuit to disable power and prevent electrical hazards when servicing.

Confirm electrical continuity of Airius unit on the ground before permanently mounting in the ceiling.

## MAINTENANCE

Frequency of cleaning will vary by application and environment.

You may clean the plastic housing with a damp warm cloth, using mild household detergents.

Do not use petroleum products, thinners or solvents to clean any part of the Airius unit.

If the Airius unit fails, contact manufacturer.

### **MATERIALS & PROPERTIES**

Constructed from recyclable materials.

The outer shell, stator and fan blades are fire rated 5VA materials.

Power cord is a 1.8 m, 3 wire, 1.02 mm diameter 300VAC rated electrical cord - CE/EU compliance rated as HO5VV (PLUG NOT SUPPLIED).

Electrically commutated, variable speed 92% efficient motor.

Motor is thermally protected. Shutoff is at 135°C & reset is at 125°C.

No lubrication required. Bearings are sealed.

## OPERATION

Designed to operate 24 hours-a-day, 7 days-a-week to maintain air circulation/thermal equalization/humidity equalization.

Use optional speed control to fine tune RPM if needed.

## INSTALLATION

Do not hard connect fans in excess of 10 kgs unless agreed with Airius prior to Installation. When attaching it is preferred if some chain or cable is used between fan and the support. However it is not imperative.

Hang from the ceiling, typically 300 mm (12") - 450 mm (18") from the roof deck to fan intake.

For cooling applications fans can be installed slightly lower. Contact Airius for design details and assistance.

The Airius unit performs best when air column from the nozzle is unimpeded to the floor.

The Airius unit should not be mounted directly in front of heat ducts, vents or any other high heat source.

Use professionally installed hardware, capable of supporting a minimum of five times the weight of the fan unit.

Hardware to hang the unit includes but is not restricted to: Hooks, chains, cables, carabiners, bridle rings, beam clamps and bolts.


Density of the placement is directly related to the effectiveness, performance and savings.

Mount out of reach from people and animals.

Floor plans, mezzanines, office locations, machinery, people placement, plumbing, lighting, duct work, electrical systems, natural light/air systems, cranes, doors, windows, ventilation and fire suppression systems are all factors in properly locating the Airius system within the ceiling.



# **CHAIN HUNG (STRAIGHT)**

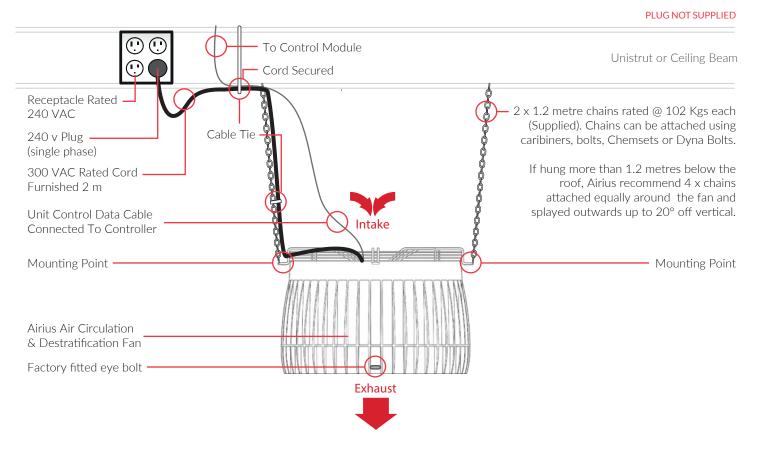


# **CEILING FIXED (STRAIGHT)**

PLUG NOT SUPPLIED To Control Module  $\bigcirc$ Unistrut or Ceiling Beam  $\bigcirc$ Cord Secured Receptacle Rated 2 x 1.2 metre chains rated @ 102 Kgs each 240 VAC (Supplied). Chains can be attached using caribiners, bolts, Chemsets or Dyna Bolts. Cable Tie 240 v Plug · (single phase) If hung more than 1.2 metres below the 300 VAC Rated Cord roof, Airius recommend 4 x chains Furnished 2 m attached equally around the fan and T splayed outwards up to 20° off vertical. Mounting Point - Factory fitted eye bolt Unit Control Data Cable **Exhaust** Connected To Controller Intake Airius Air Circulation & Destratification Fan Units can be angled up to 90° off vertical



# **BMS CONTROL WIRING**

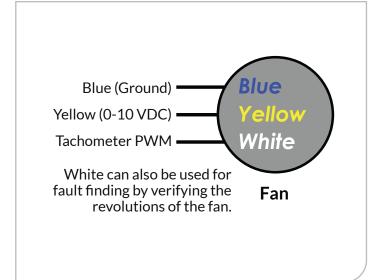

# **GENERAL NOTES**


0-10 V signal allows infinitely variable open loop speed control

Connecting the red and yellow leads will allow EC fans to operate at full speed

A single controller can be used to control multiple fans with the same speed setting

The BMS generates this voltage to send to the signal (yellow)

Yellow is labelled as 0-10VDC because that is the acceptable range of voltages that the fan will accept

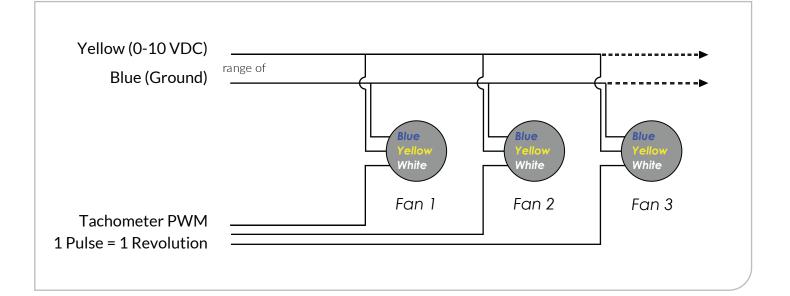




#### G400/EC-230V

# **Product Information & Installation Guide SAPPHIRE SERIES - Model G400/EC**

# (0-10V) POTENTIOMETER EC FAN SPEED CONTROLLER



# DIMENSIONS

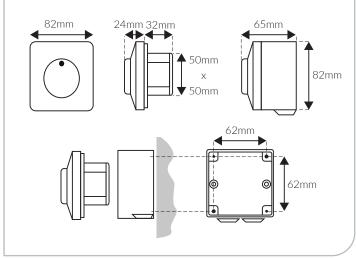

# **COMPONENTS**





MOUNTING CASE SPEED CONTROLLER

2 x SCREWS & WASHERS TO FIT CONTROLLER TO MOUNTING CASE



NUT & WASHER TO FIT FACEPLATE TO CONTROLLER









## **Technical Data**

Voltage: 230VAC – 50/60Hz Output: 0-10 Vdc > 1 kOhm (max 8 mA)

## 1 X EC CONTROLLER REQUIRED PER CIRCUIT.


PLEASE CONTACT AIRIUS FOR RECOMMENDED **QUANTITY OF FANS PER CONTROLLER FOR YOUR** UNIQUE APPLICATION.


## WARRANTY

Two years from delivery date against defects in manufacturing. Any modifications or alterations to the product relieve the manufacturer of all responsibility.

The manufacturer bears no responsibility for any misprints or mistakes in this data, and modifications or improvements to the product can be made at any time after date of publication.

## WIRING

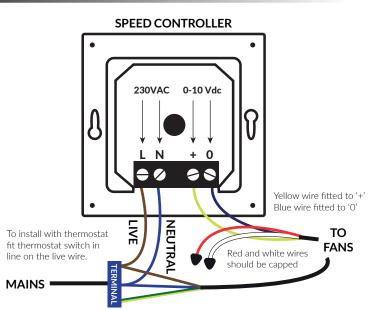

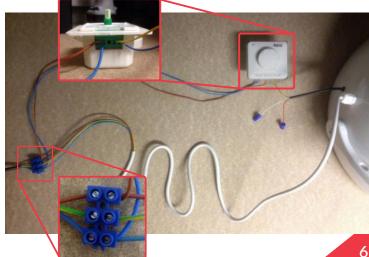



#### **INSET MOUNTING (IP44)**

Break mains voltage. Connect according to diagram. Mount the inner case to the wall with the connections pointing down. Mount cover with nut to the wall. Push knob in place at off position.

#### **SURFACE MOUNTING (IP54)**

Break mains voltage. Mount surface mounting case to the wall together with included grommets. Connect according to diagram. Mount inner case in surface mounting case with included screws. Mount cover with nut to surface mounting case. Push knob in place at off position. When needed a 5mm hole for condensation water is to be drilled at the bottom of the surface mounting case.

#### IN CASE OF FAULTY OPERATION

Please check: right voltage is applied, all connections are correct, the machine to be regulated is functioning.

#### TRANSPORT AND STOCK KEEPING

Avoid shocks. Stock in original packaging. Avoid extreme conditions.

#### MAINTENANCE

In normal conditions the controllers are maintenance-free. If soiled clean with dry or dampish cloth. In case of heavy pollution clean with a non-aggressive product. In these circumstances the controller should be disconnected from the mains. Pay attention that no fluids enter the controller. Only reconnect the controller to the mains when it is completely dry.

All works may only be carried out by skilled personnel following the local regulations and AFTER the controller is completely separated from the mains.

## CAUTION

Electrical installations should only be carried out by qualified personnel only. Follow safety measures to avoid electric shock.

According to the low voltage directive: 2006/95/EC/ The EMC directive: 2004/108/EC





# Airius Europe, Middle East & Asia

Airius Europe Ltd Holwell Farm, Cranborne Dorset BH21 5QP, UK Tel - +44 (0) 1202 554200 Fax - +44 (0) 1202 554396 Email - info@airius.co.uk Web - www.airius.co.uk

# **Airius Americas**

811 South Sherman Street Longmont Colorado 80501 USA Tel - (00) 1 888 247 7327 Email - Info@airiusfans.com Web - www.airiusfans.com

# Airius Oceania & S.E. Asia

P.O. Box 1812 Byron Bay NSW 2481 AUSTRALIA Tel - +61 (2) 6608 2736 Email - info@airius.com.au Web - www.airius.com.au

USA and foreign Patents granted to AIRIUS LLC, USA, further patents pending. AIRIUS & AIRIUS SYSTEMS is the copyright property of AIRIUS LLC, USA. All material issued by, or emanating from, Airius Europe Ltd is the Copyright property of Airius Europe Ltd, UK.

